
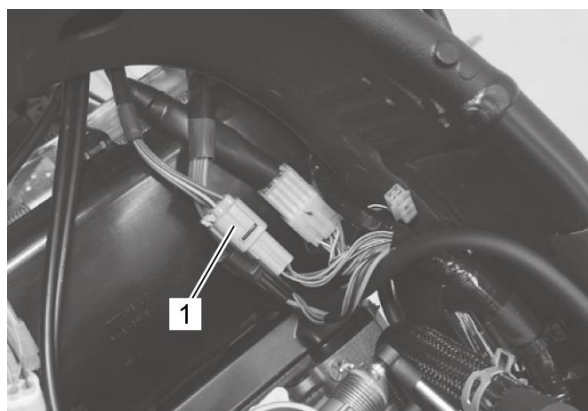


9C









## Ignition Switch Inspection

- 1) Remove the air cleaner box. 
- 2) Disconnect the ignition switch coupler (1).



 
 
 



- 3) Inspect the ignition switch for continuity with a circuit tester. If any abnormality is found, replace the ignition switch with a new one.

**If immobilizer is equipped**

Color Position	R	O	G/Y	Br
ON				
OFF				
LOCK				
P				



**If immobilizer is not equipped**

Color Position	R	O	G/Y	Br	O/Y
ON					
OFF					
LOCK					
P					



- 4) After finishing the ignition switch inspection, reinstall the removed parts.