


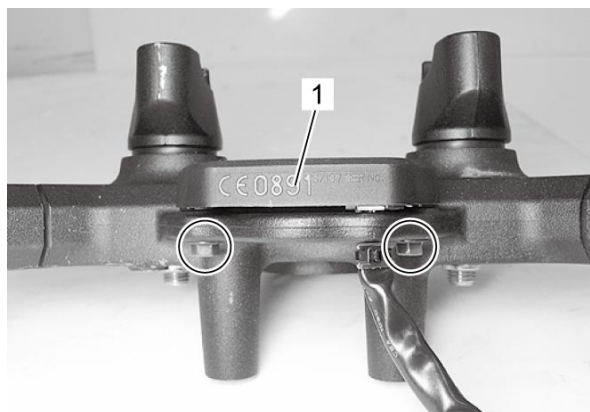
1H



Immobilizer Antenna Removal and Installation (If Equipped)

Removal

- 1) Remove the ignition switch. 
- 2) Remove the immobilizer antenna (1).



Installation

Install the immobilizer antenna in the reverse order of removal.