


Repair Instructions

Ignition Coil Construction

BENE31J1180600g

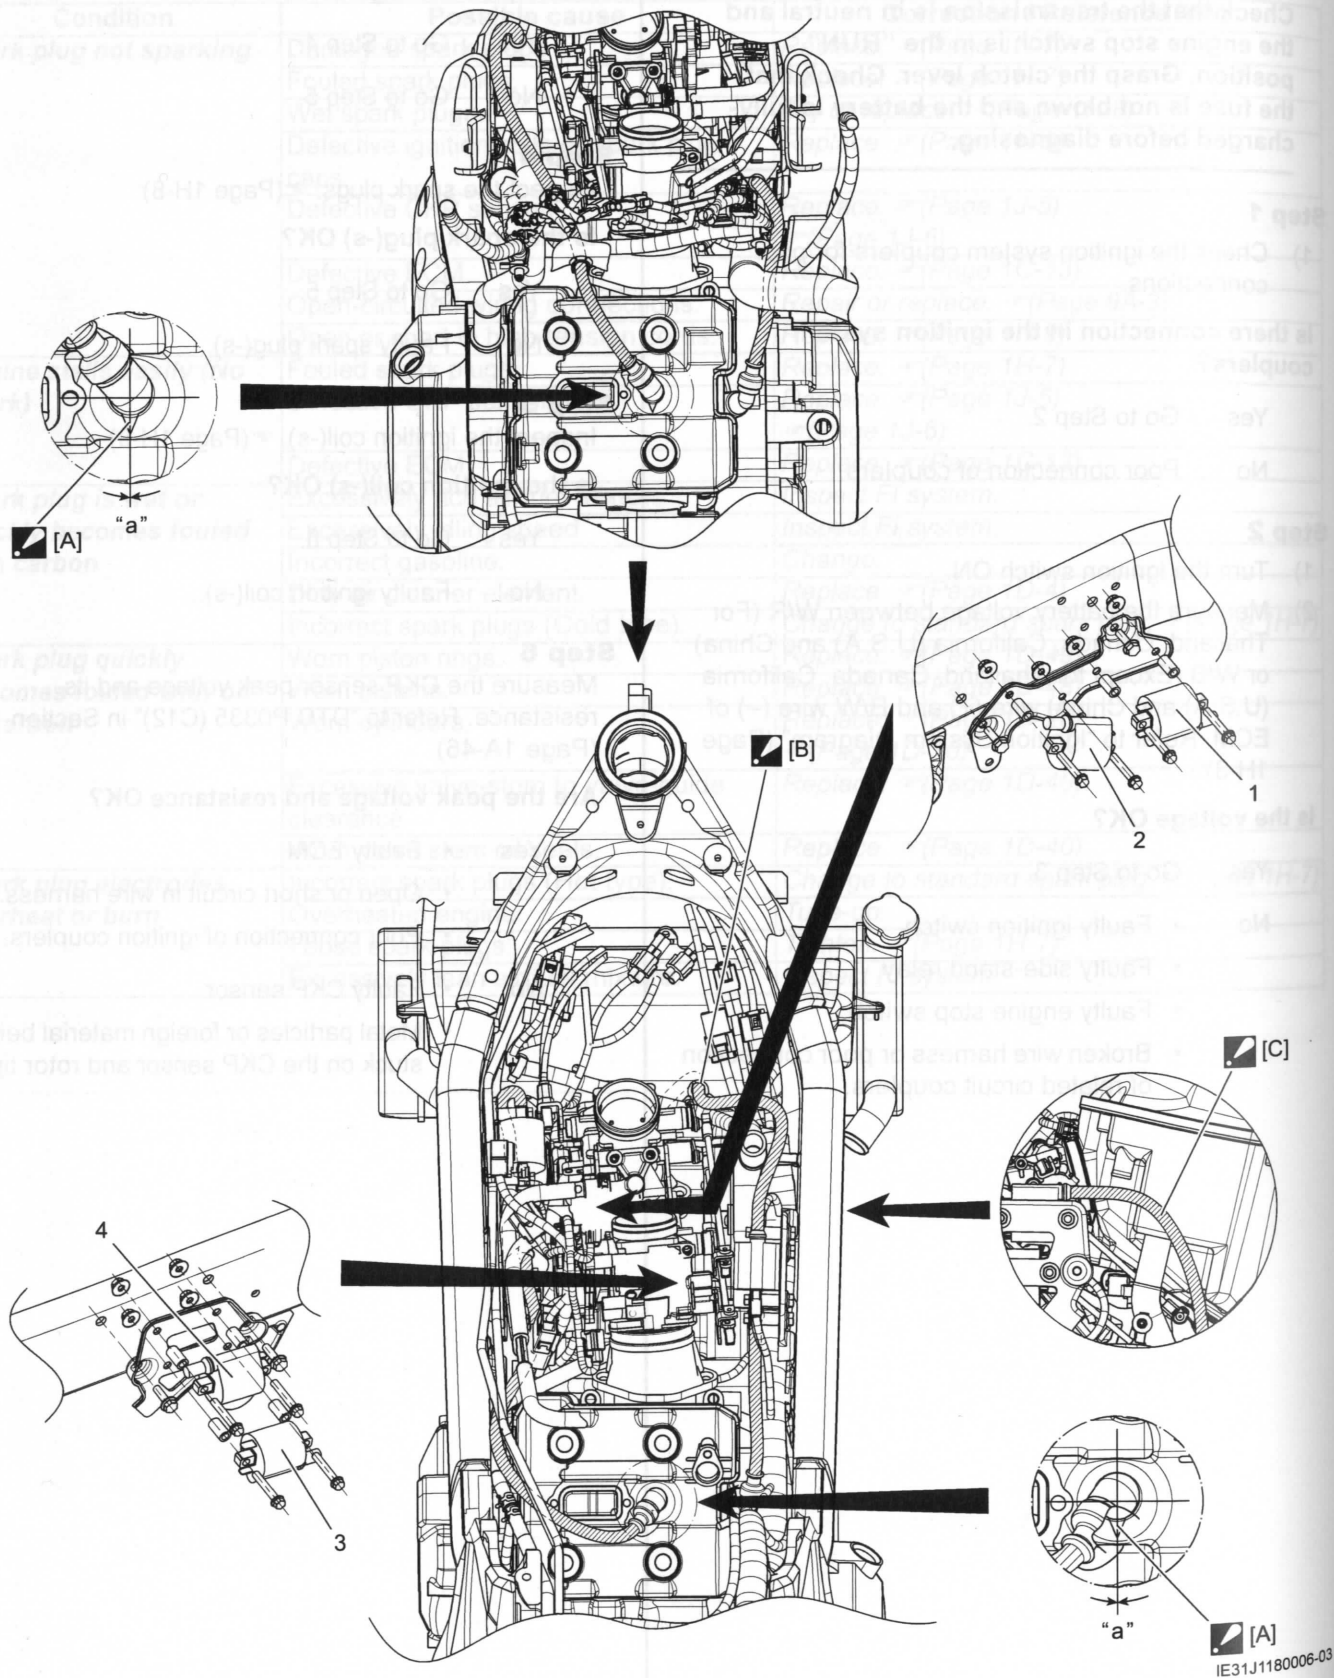

IE31J1180006-03

<input checked="" type="checkbox"/> [A]: Face the "△" mark to the exhaust side.	2. Ignition coil #2 (Center)
<input checked="" type="checkbox"/> [B]: Fit the high-tension cord to the clipping point of radiator heat shield.	3. Ignition coil #2 (Side)
<input checked="" type="checkbox"/> [C]: Pass the high-tension cord outside of the air cleaner box.	4. Ignition coil #1 (Center)
1. Ignition coil #1 (Side)	"a": 0° ± 5°

Spark Plug Removal and Installation

BENE31J11806002

Removal

▲ WARNING


The hot radiator and hot engine can burn you.
Wait until the radiator and the engine are cool enough to touch.

#1 (Side)

- 1) Turn the ignition switch OFF.
- 2) Disconnect the spark plug cap (1).
- 3) Remove the spark plug (2) with a spark plug wrench.

Special tool

(A): 09930-10190

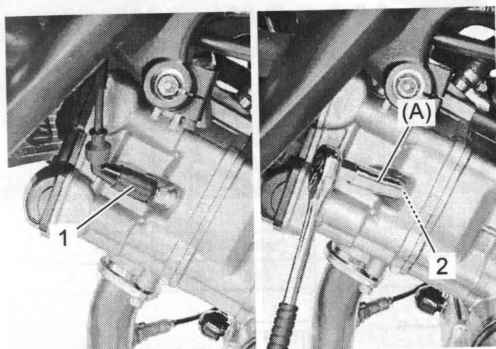


IE31J1180007-01

#1 (Center)

- 1) Remove the side lower cowlings. (Page 9D-14)
- 2) Remove the radiator mounting bolt (1).
- 3) Move the radiator (2) forward.

NOTICE

Be careful not to damage the radiator fins.

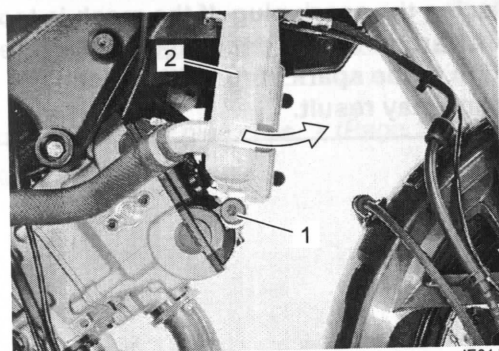


IE31J1180008-01

- 4) Disconnect the spark plug cap (1).
- 5) Remove the spark plug (2) with a spark plug wrench.

Special tool

(A): 09930-10190

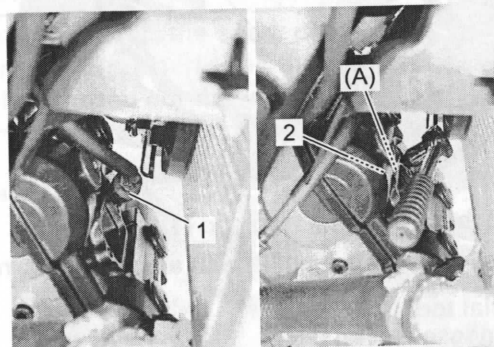


IE31J1180009-01

#2 (Side)

- 1) Lift and support the fuel tank. (Page 1G-9)
- 2) Disconnect the spark plug cap (1).
- 3) Remove the spark plug (2) with a spark plug wrench.

Special tool

(A): 09930-10190

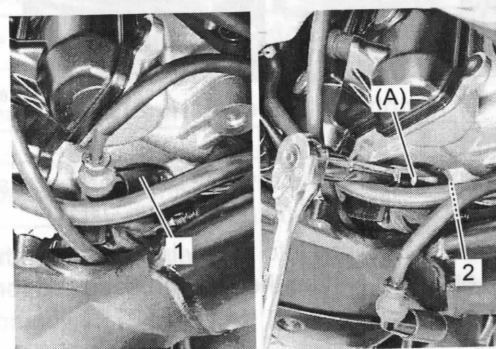

IE31J1180010-01