

1H



## Ignition Coil Removal and Installation


Refer to [Ignition Coil Construction](#).

### Removal


- 1) Remove the throttle body assembly.
- 2) Disconnect the all spark plug caps.
- 3) Disconnect the all ignition coil couplers.
- 4) Mark the ignition coils to identify their respective cylinders.
- 5) Remove the ignition coil brackets.
- 6) Remove the ignition coils.

### Installation

- 1) Install the ignition coil brackets and ignition coils.
- 2) Connect the ignition coil couplers.

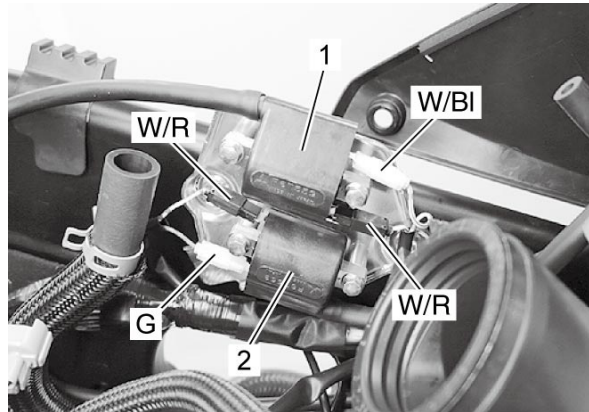


1.	Ignition coil #1 (Center)
2.	Ignition coil #2 (Side)

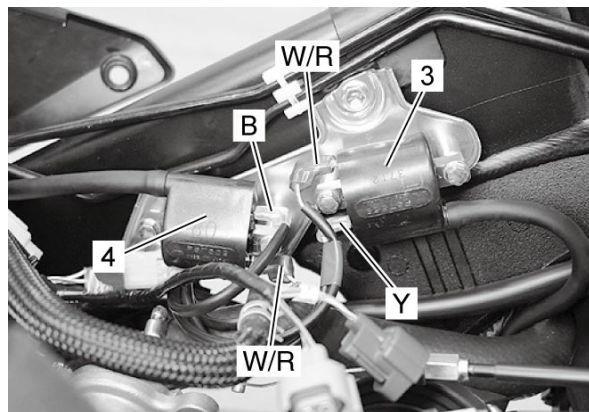

3.	Ignition coil #1 (Side)
----	-------------------------

4.	Ignition coil #2 (Center)
----	---------------------------

- 3)** Connect the spark plug caps. 
- 4)** Install the removed parts.