





## Starter Motor Runs But Does Not Crank the Engine

**NOTE:**

The starter motor does not run when the side-stand set on the ground.

Step	Action	Yes	No
<b>1</b>	Check the side-stand switch.  <i>Is the side-stand switch OK?</i>	Go to Step 2.	Faulty side-stand switch.
<b>2</b>	Check the starter clutch.  <i>Is the starter clutch OK?</i>	<ul style="list-style-type: none"><li>• Open circuit in wire harness.</li><li>• Poor contact of connector.</li></ul>	Faulty starter clutch.