



## Starter Torque Limiter Inspection

[Reference: Starter Torque Limiter / Starter Clutch Removal and Installation](#)

**NOTICE:**

- Do not attempt to disassemble the starter torque limiter.
- The starter torque limiter is available only as an assembly part.

- 1) Hold the starter torque limiter with the special tools and vise.

**Special Tool**

(A): **09930-73110**

(B): **09930-73120**

- 2) Turn the starter torque limiter with a torque wrench and check the slip torque. If the slip torque is not within the specification, replace the starter torque limiter with a new one.

**Starter torque limiter slip torque**

**Standard: 20 – 45 N·m (2.0 – 4.5 kgf-m, 14.5 – 32.5 lbf-ft)**

