


1I



Starter Relay Removal and Installation

Removal

- 1) Remove the seat.
- 2) Disconnect the battery (-) lead wire from the battery.
- 3) Disconnect the starter relay coupler (1) and remove the starter relay cover (2).

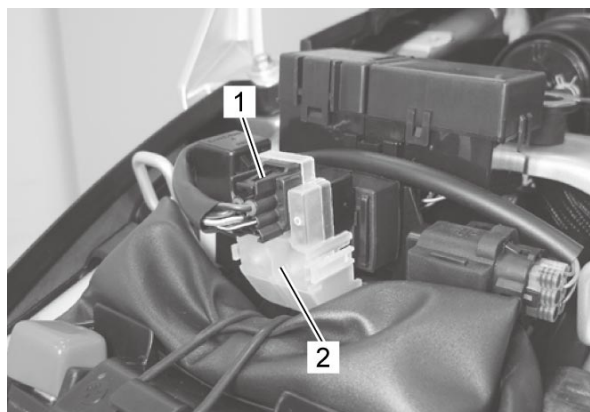


- 4) Disconnect the starter motor lead wire (1) and battery (+) lead wire (2).

NOTE:

Be sure to disconnect the starter motor lead wire (1) first, then disconnect the battery (+) lead wire (2).

- 5) Remove the starter relay (3).

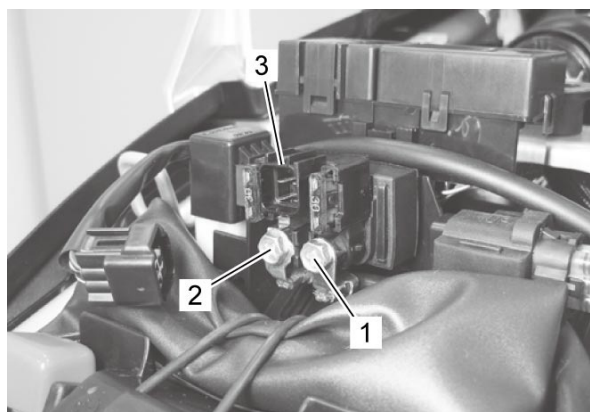

Installation

Reference: Starter Relay Inspection

Install the starter relay in the reverse order of removal.