


11



## Side-stand Relay Removal and Installation

### Removal

- 1) Turn the ignition switch OFF.
- 2) Remove the seat.
- 3) Remove the cap and side-stand relay (1).

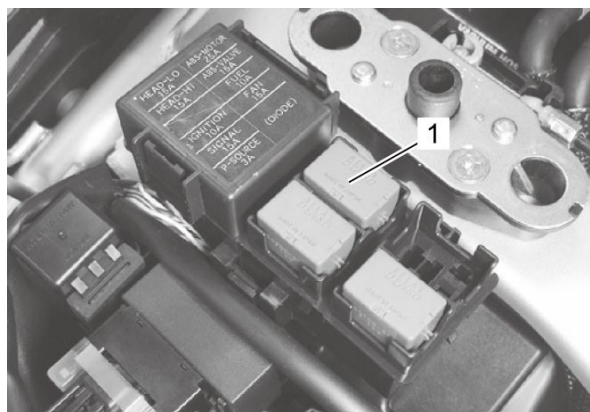

### Installation

**Reference: Side-stand / Ignition Interlock System Parts Inspection**

Install the side-stand relay in the reverse order of removal.