

1J




Battery Removal and Installation

Removal


- 1) Remove the seat.
- 2) Disconnect the battery (-) lead wire (1).
- 3) Disconnect the battery (+) lead wire (2).

NOTE:

Disconnect the battery (-) lead wire (1) first, then disconnect the battery (+) lead wire (2).

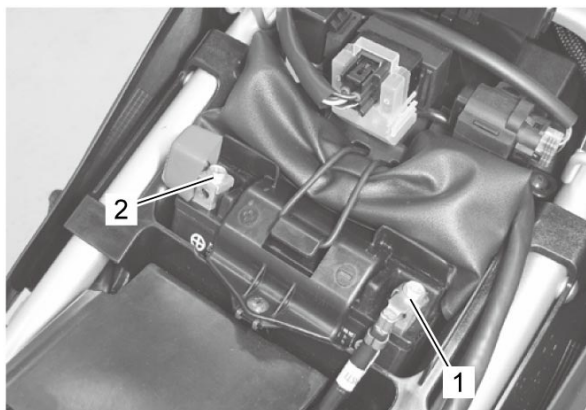

- 4) Remove the tool holder (1) and battery (2) from the motorcycle.

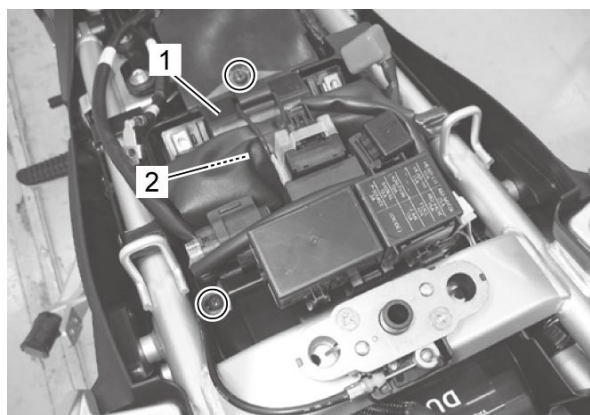

Installation

Install the tool holder and battery in the reverse order of removal. Pay attention to the following points:

- Tighten the battery lead wire mounting bolts securely.

NOTE:

Connect the battery (+) lead wire (1) first, then connect battery (-) lead wire (2).

