


1J



Battery Current Leakage Inspection


- 1) Turn the ignition switch OFF.
- 2) Remove the seat and disconnect the battery (-) lead wire. 
- 3) Measure the current between battery (-) terminal and the battery (-) lead wire using the multi circuit tester. If the reading exceeds the specified value, leakage is evident.

NOTICE:

- In case of a large current leak, turn the tester to high range first to avoid tester damage.
- Do not turn the ignition switch to ON position when measuring current.

Battery leakage current

Under 3 mA

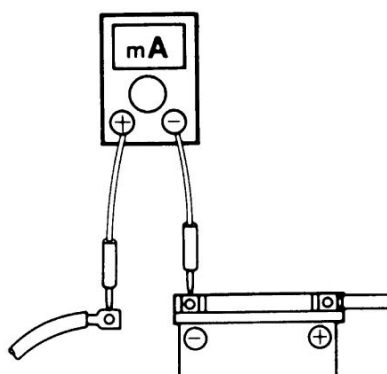

- 4) Connect the battery (-) terminal and install the seat. 