

1J



## Regulated Voltage Inspection

- 1) Remove the seat.
- 2) Start the engine and keep it running at 5000 r/min with the dimmer switch turned HI position.
- 3) Measure the DC voltage between the battery (+) and (-) terminals using the multi circuit tester. If the voltage is not within the specified value, inspect the generator and regulator/rectifier.
  - Generator:
  - Regulator/rectifier:

**NOTE:**

**When making this test, be sure that the battery is in fully charged condition.**

### Regulated voltage (Charging output)

**Standard: 13.5 – 15.0 V at 5000 r/min**

