


1J



## Regulator / Rectifier Removal and Installation

### Removal

- 1) Remove the body cowling from cowling brace.
- 2) Remove the regulator/rectifier (1).

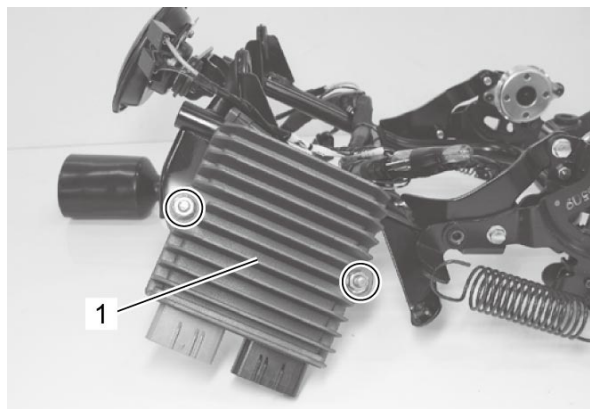

### Installation

Install the regulator/rectifier in the reverse order of removal.