

2B



Front Suspension Adjustment

NOTICE:



Adjust the left and right front forks to the same setting.

Spring Pre-load Adjustment

- Turn the spring pre-load adjuster (1) counterclockwise fully. From that position (softest), turn it clockwise to the specified position "a".

Front fork spring pre-load

Standard: 11 mm (0.4 in)

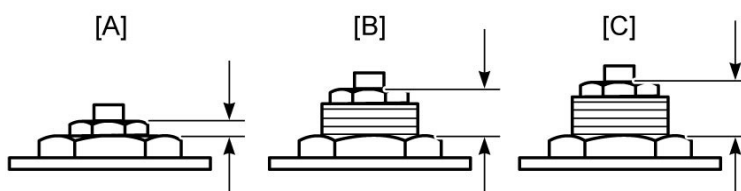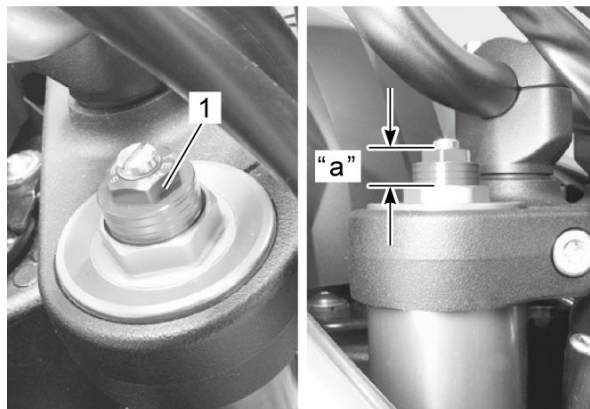

[A]:	4 mm (0.16 in) (maximum)	[C]:	14 mm (0.55 in) (minimum)
[B]:	11 mm (0.43 in) (standard)		

Damping Force Adjustment

Rebound damping force

Fully turn the damping force adjuster (1) clockwise. From that position (stiffest), turn it counterclockwise to standard setting position.

Front fork rebound damping force

Standard: 8 clicks counterclockwise out from stiffest position



Compression damping force

Fully turn the damping force adjuster (1) clockwise. From that position (stiffest), turn it counterclockwise to the standard setting position.

Front fork compression damping force

Standard: 8 clicks counterclockwise from stiffest position

