

2C

## Rear Shock Absorber Bearing Removal and Installation




Refer to [Rear Shock Absorber Removal and Installation](#).

### Removal

- 1) Remove the rear shock absorber bearing (1) with the special tool.

#### Special Tool

(A): [09943-88211](#)

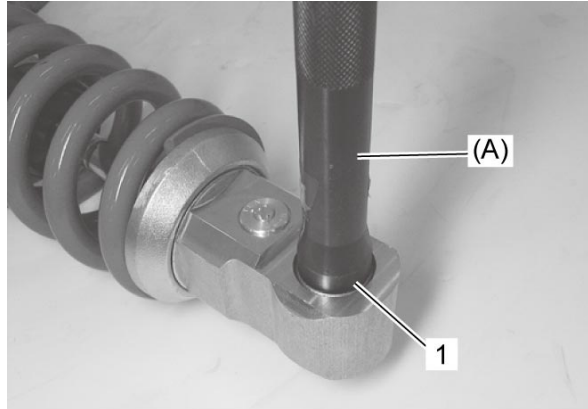

### Installation


- 1) Apply a small quantity of the grease to housing when installing the bearing.



**"A": Grease 99000-25011 (SUZUKI SUPER GREASE A)**

- 2) Press the new bearing into the rear shock absorber to the depth "a" of 0.5 mm (0.02 in) from the edge with the special tool and suitable size socket wrench.

#### Special Tool

(A): [09924-84521](#)

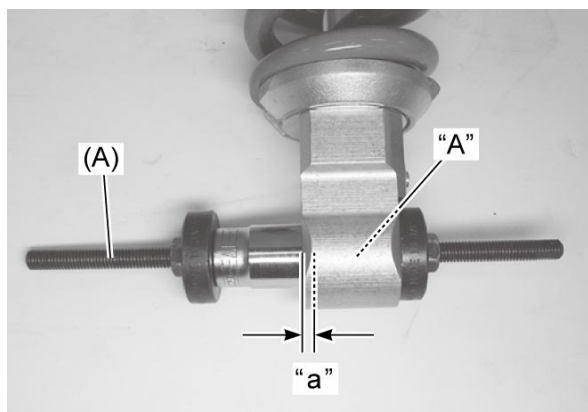

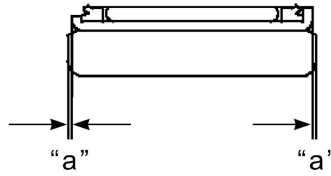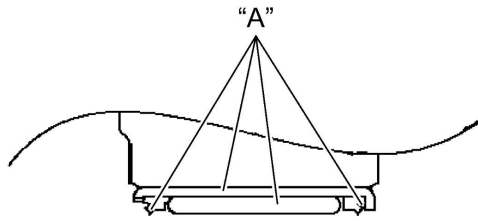

**3)** Apply grease to the bearing and dust seal.

**"A": Grease 99000-25011 (SUZUKI SUPER GREASE A)**

