

2C




Cushion Lever Removal and Installation

[Reference: Rear Suspension Components](#)

Removal

- 1) Support the motorcycle with a jack to relieve load on the cushion levers.
- 2) Remove the cushion levers (1) and washers.

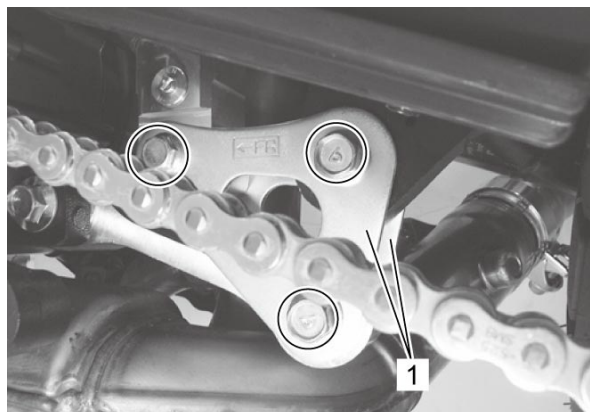

Installation

[Reference: Cushion Lever Inspection](#)

- 1) Install the washers (1) between the cushion rod and cushion levers.
- 2) Set the cushion levers (2) so that the arrow mark (3) points forward.
- 3) Insert the each mounting bolts from left side, and tighten their new nuts to the specified torque.

Tightening torque

Cushion lever mounting nut (a): 98 N·m (9.8 kgf-m, 71.0 lbf-ft)

Cushion rod mounting nut (b): 98 N·m (9.8 kgf-m, 71.0 lbf-ft)

Rear shock absorber lower mounting nut (c): 50 N·m (5.0 kgf-m, 36.5 lbf-ft)

