

2C




Cushion Rod Removal and Installation


[Reference: Rear Suspension Components](#)

Removal

- 1) Support the motorcycle with a jack to relieve load on the cushion rod.
- 2) Remove the cushion rod (1) and washer.

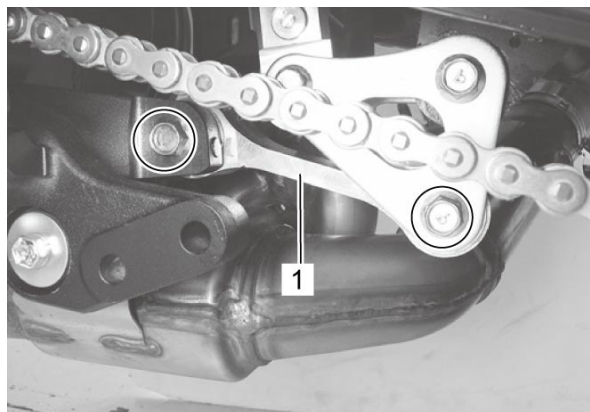


- 3) Remove the spacers (1).

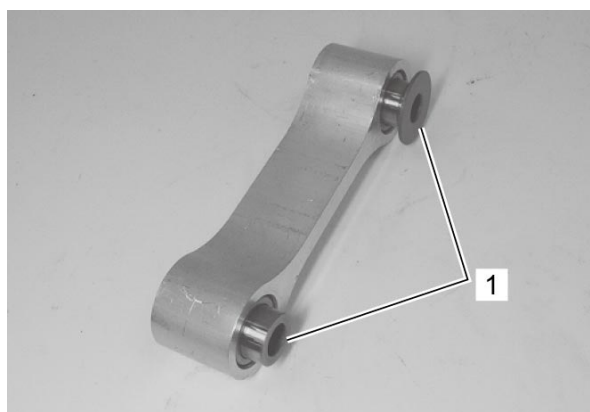

Installation

[Reference: Cushion Rod Inspection](#)

- 1) Install the spacer (1) into the cushion rod.
- 2) Before installing the cushion rod to the frame, insert the spacer (2) into the bearing from the right side.
- 3) Install the washer (3) between the cushion rod left side and frame.

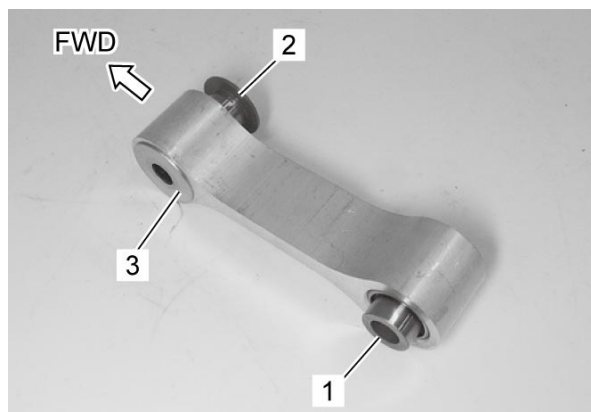

- 4) Install the washers (1) between cushion rod and cushion levers.
- 5) Insert the cushion rod mounting bolts from left side, and tighten their new nuts (2) to the specified torque.

Tightening torque

Cushion rod mounting nut (a): 98 N·m (9.8 kgf-m, 71.0 lbf-ft)

