

2C



## Cushion Rod Inspection

Refer to [Cushion Rod Removal and Installation](#).


### Spacer

Inspect the spacers for any flaws or other damage. If any defects are found, replace it with a new one.



### Cushion Rod Bearing

- 1) Insert the spacers into bearings.
- 2) Check the play by moving the spacers up and down. If excessive play is noted, replace the bearing with a new one.

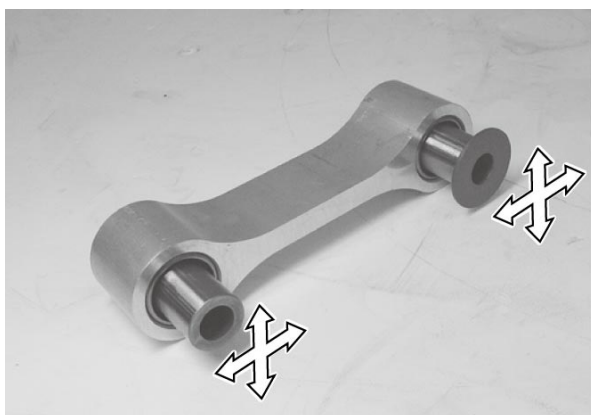

### Cushion Rod

Inspect the cushion rod for damage. If any defect is found, replace the cushion rod with a new one.

