

2D




Wheel Rim / Air Valve Inspection and Cleaning

Refer to [Tire Removal and Installation](#).

Refer to [Air Valve Removal and Installation](#).

Wheel Rim

Wipe the wheel clean and check for the following points:

- Distortion and crack.
- Any flaws and scratches at the bead seating area.
- Wheel rim runout. 



Air Valve

Inspect the air valve (1) for peeling and damage. If any defect is found, replace the air valve with a new one.



Inspect the valve core seal (1) for wear and damage. If any defect is found, replace the valve core with a new one.

