

2D



Air Valve Removal and Installation

Refer to [Tire Removal and Installation](#).

Removal

- 1) Remove the air valve (1) from the wheel.



Installation


- 1) Any dust or rust around the valve hole (1) must be cleaned off.



- 2) Install the new air valve (1) into the air valve hole with a special tire lubricant or neutral soapy liquid applied at the valve lip (2).

NOTICE:

Be careful not to damage the valve lip of the air valve.

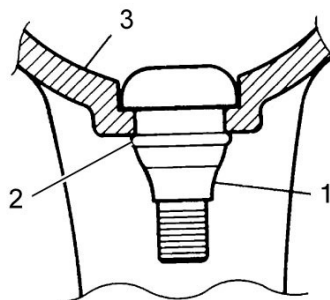



3.	Wheel
----	-------