

2D



Wheel Balance Check and Adjustment

Refer to [Front Wheel Assembly Removal and Installation](#).


Refer to [Rear Sprocket Mounting Drum Assembly Removal and Installation](#).

- 1) Check the wheel balance using the balancer and adjust the wheel balance if necessary.

NOTICE:

For operating procedures, refer to the instructions supplied by the wheel balancer manufacturer.

- 2) When installing the new balancer weight (1) to the wheel (2), set the balancer weight on center rib of wheel.

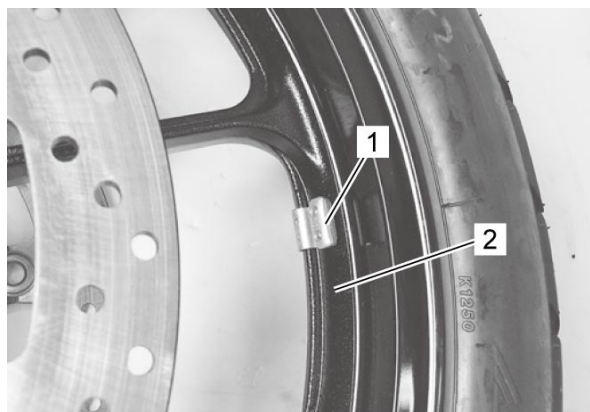

- 3) Recheck the wheel balance.