

2D

Front Wheel Dust Seal / Front Wheel Bearing Removal and Installation



Refer to [Front Wheel Assembly Removal and Installation](#).


[Reference: Front Wheel Components](#)

Removal

- 1) Remove the dust seals (1) on both sides with the special tool.

Special Tool


(A): 09913-50121

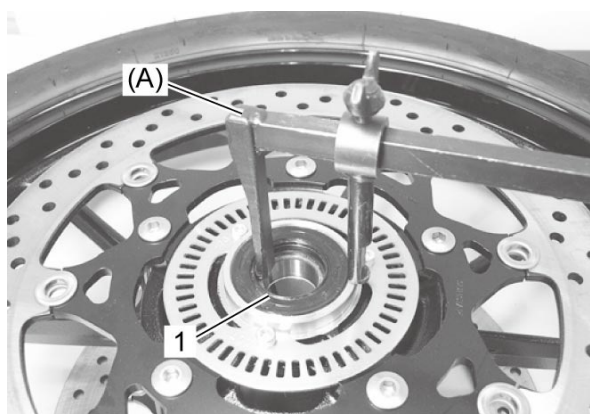


- 2) Remove the bearings (1) on both sides with the special tool.

Special Tool

(A): 09921-20240

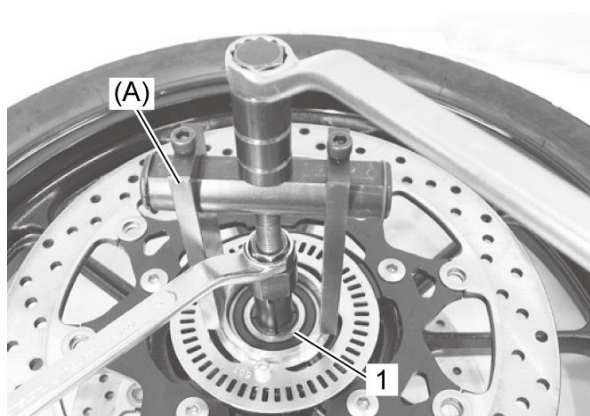


- 3) Remove the spacer (1).

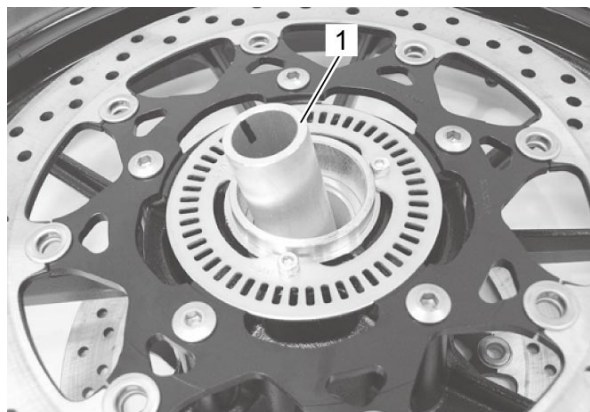

Installation

- 1) Apply grease to the new wheel bearings.

Grease 99000-25011 (SUZUKI SUPER GREASE A)

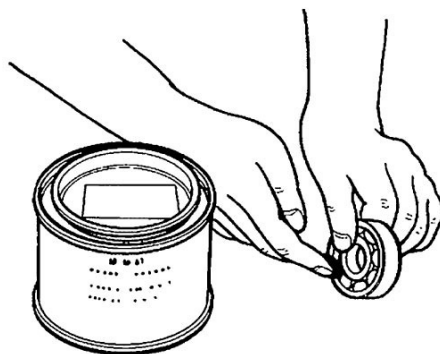

- 2) First install the right wheel bearing, then install the spacer (1) and left wheel bearing with the special tool.


NOTICE:

The sealed cover of the bearing must face outside.

Special Tool

(A): 09941-34513

(B): 09924-84510

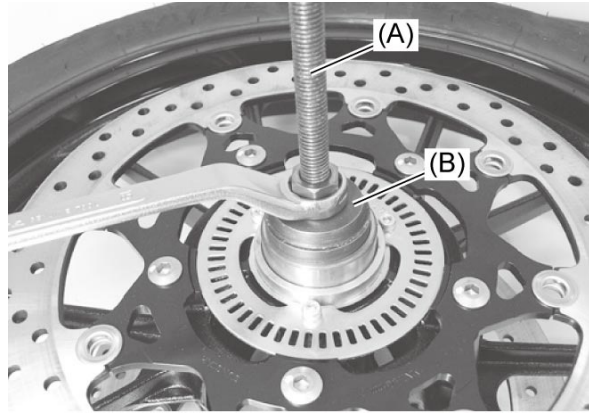


"a":	Clearance
------	-----------

- 3) Install the new dust seals on both sides with the special tool.

Special Tool

(A): 09913-70210

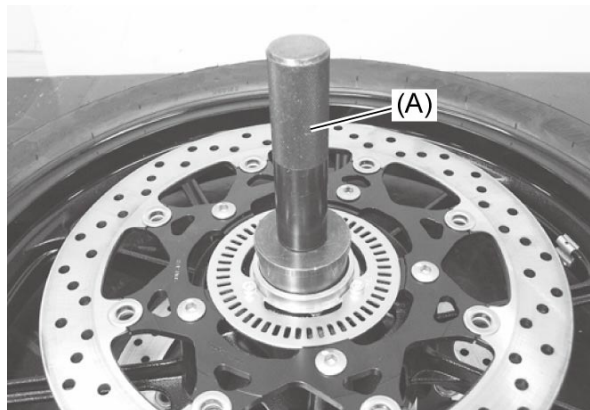

- 4) Apply grease to the lip of the dust seals.

"A": Grease 99000-25011 (SUZUKI SUPER GREASE A)

