

2D




Rear Wheel Assembly Removal and Installation


[Reference: Rear Wheel Components](#)

Removal


- 1) Remove the rear wheel speed sensor mounting bolt.
- 2) Remove the rear axle nut (1) and washer (2).

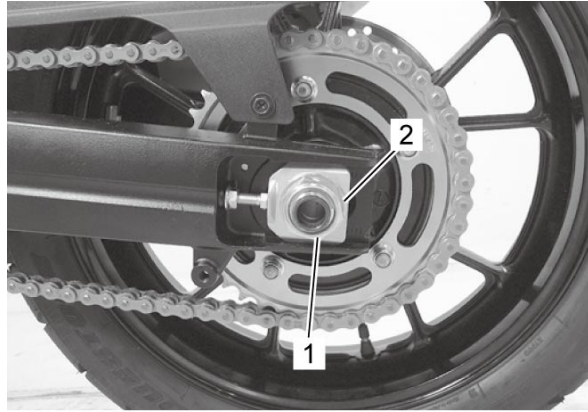


- 3) Raise the rear wheel off the ground and support the motorcycle with a jack or wooden block.
- 4) Draw out the rear axle.
- 5) Remove the drive chain (1) from the rear sprocket.

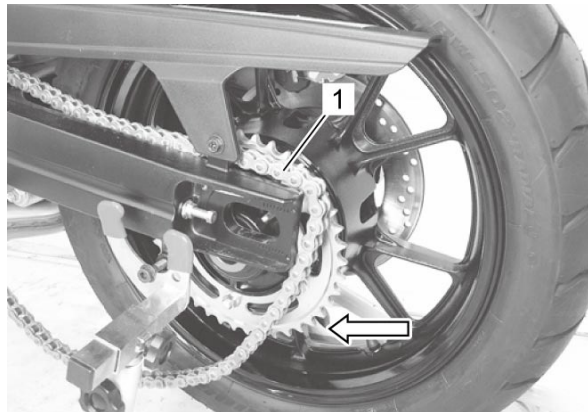

- 6) Remove the rear brake caliper (1) from the swingarm.
- 7) Remove the rear wheel.

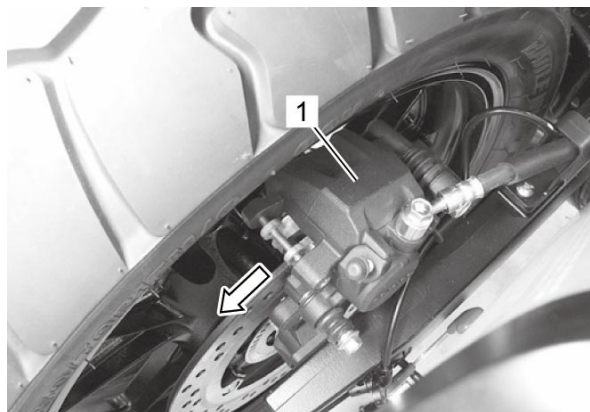

8) Remove the left and right spacers (1).

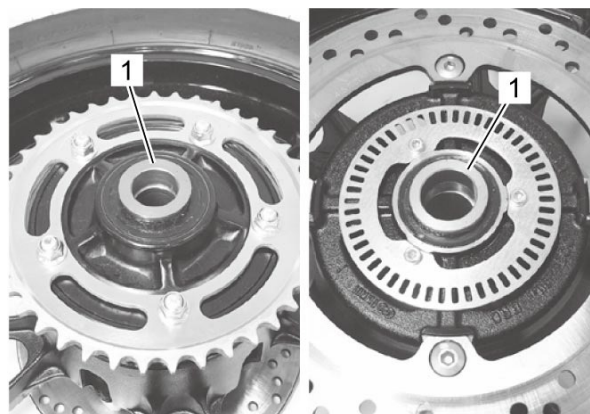


Installation

[Reference: Wheel / Wheel Axle Inspection](#)

[Reference: Tire Inspection and Cleaning](#)

[Reference: Wheel Rim / Air Valve Inspection and Cleaning](#)

1) Install the left and right spacers (1).

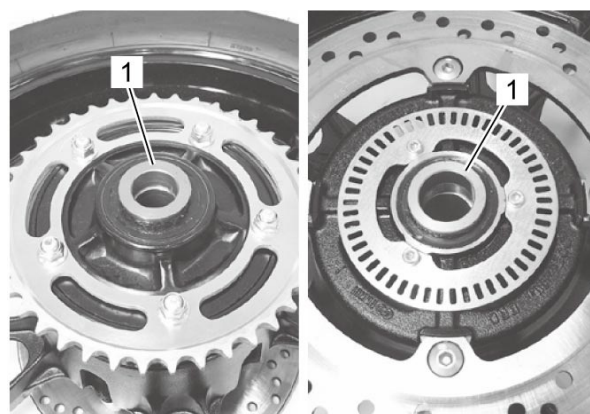


2) Install the rear wheel.

⚠ WARNING:

The directional arrow on the tire should point to the wheel rotation, when installing the wheel.



- 3) Install the rear brake caliper to the swingarm.
- 4) Install the drive chain to the rear sprocket.
- 5) Install the rear axle (1) and washer (2).
- 6) Tighten the new rear axle nut (3) temporarily.

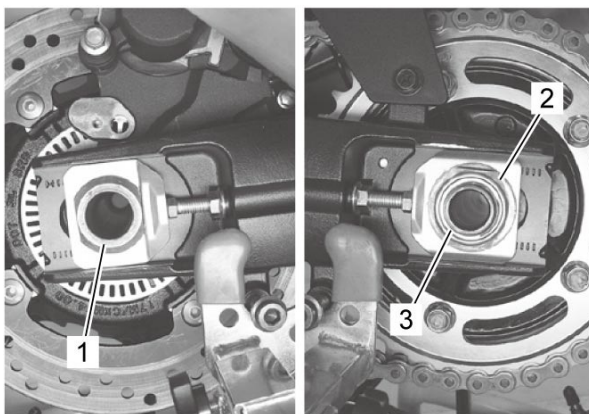

- 7) Remove the jack or a wooden block.
- 8) Adjust the chain slack. Refer to [Drive Chain Inspection and Adjustment](#).
- 9) Install the rear wheel speed sensor. 