

3A



## Rear Sprocket Removal and Installation

Refer to [Rear Wheel Assembly Removal and Installation](#).

[Reference: Drive Chain Related Components](#)

### Removal

- 1) Remove the rear sprocket (1).



### Installation

[Reference: Rear Sprocket Mounting Drum / Sprocket Inspection](#)

Install the rear sprocket in the reverse order of removal. Pay attention to the following points:

- Tighten the new rear sprocket nuts (1) to the specified torque.

**NOTE:**

The stamped mark (2) on the sprocket should face outside.

### Tightening torque

Rear sprocket nut (a): 60 N·m (6.0 kgf-m, 43.5 lbf-ft)

