

3A




Rear Sprocket Mounting Drum / Sprocket Inspection

Refer to [Rear Wheel Assembly Removal and Installation](#).


Dust Seal

Inspect the sprocket mounting drum dust seal (1) for wear or damage. If any damage is found, replace the dust seal with a new one.

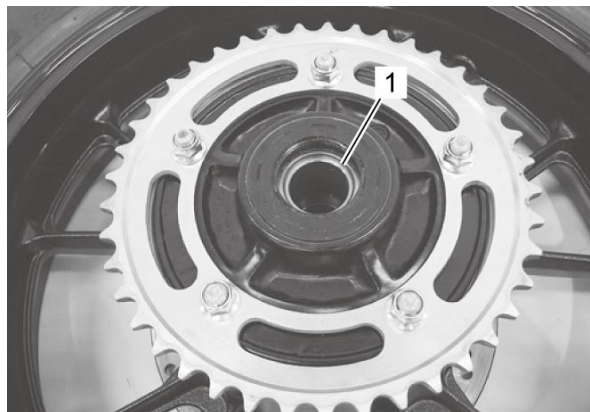


Bearing

Inspect the play of the sprocket mounting drum bearings by hand while they are in the wheel and drum. Rotate the inner race by hand to inspect for abnormal noise and smooth rotation. Replace the bearing if there is anything unusual.

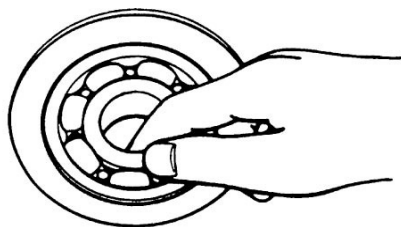

Sprocket

- 1) Remove the engine sprocket cover. (Engine sprocket only)
- 2) Inspect the sprocket teeth for wear. If they are worn as shown, replace the engine sprocket, rear sprocket and drive chain as a set.
 - Engine:
 - Rear:

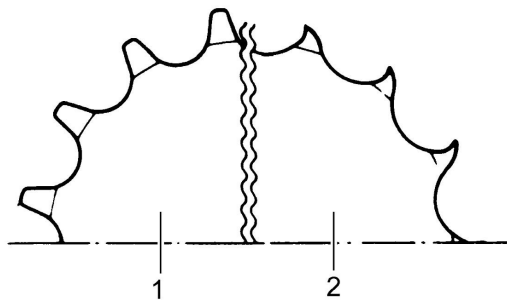

1.	Normal wear	2.	Excessive wear
----	-------------	----	----------------

3) Install the engine sprocket cover (Engine sprocket only).

Wheel Damper

Refer to [Rear Wheel Damper Inspection](#).

Drive Chain

Refer to [Drive Chain Inspection and Adjustment](#).