

3A



Rear Sprocket Mounting Drum Dust Seal / Bearing Removal and Installation


Refer to [Rear Sprocket Mounting Drum Assembly Removal and Installation](#).

Removal

- 1) Remove the dust seal (1) using the special tool.

Special Tool


(A): 09913-50121

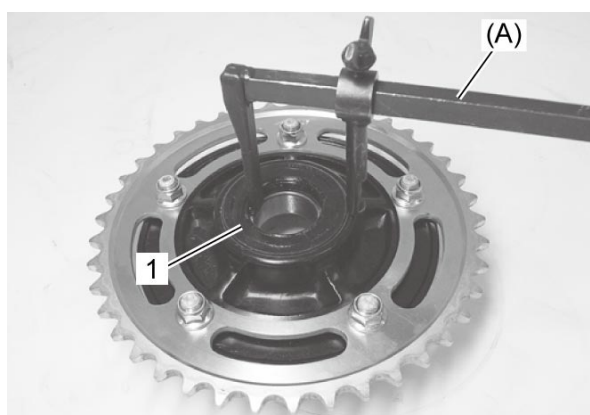

- 2) Remove the bearing (1) with the special tool.

Special Tool


(A): 09921-20240

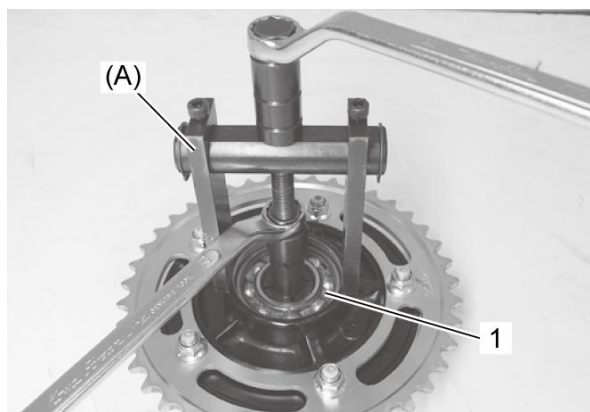

Installation

- 1) Apply grease to the new bearing.

Grease 99000-25011 (SUZUKI SUPER GREASE A)

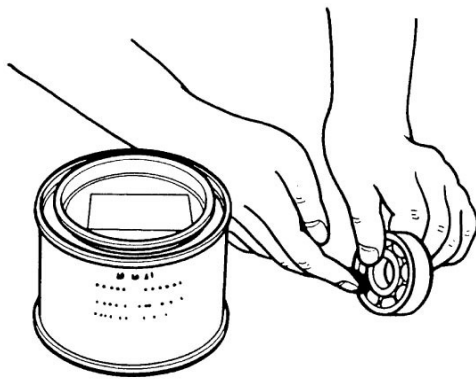


- 2) Install the bearing (1) with the special tool.

NOTICE:

The sealed cover of the bearing must face inside.

Special Tool


(A): 09924-84510

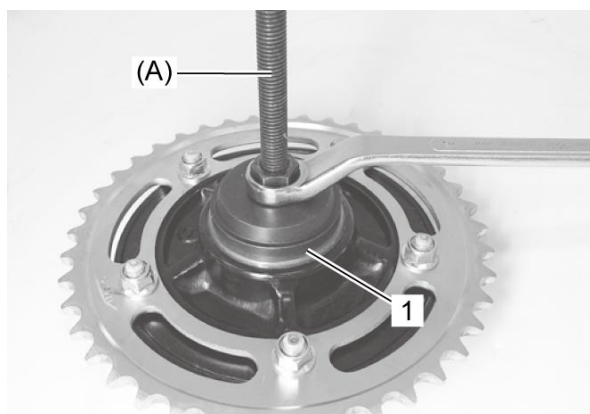

- 3) Install a new dust seal with the special tool.

Special Tool

(A): 09913-70210

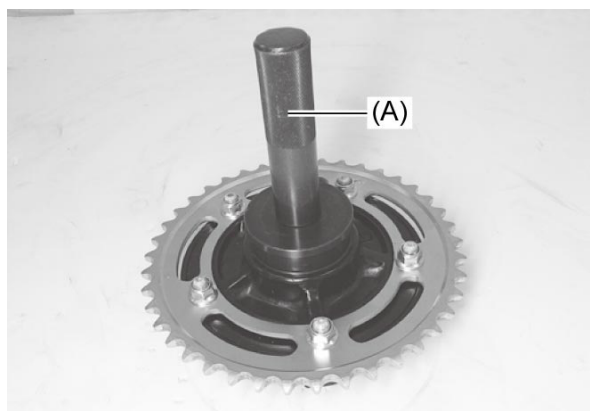



4) Apply grease to the dust seal lip.

"A": Grease 99000-25011 (SUZUKI SUPER GREASE A)

