

## Section 4

## Brakes

## CONTENTS

<b>Precautions .....</b>	<b>4-1</b>	Front Brake Components .....	4B-1
<b>Precautions.....</b>	<b>4-1</b>	Front Brake Pad Inspection.....	4B-2
Precautions for Brake System .....	4-1	Front Brake Pad Replacement.....	4B-2
Brake Fluid Information .....	4-1	Front Brake Caliper Removal and Installation.....	4B-3
<b>Brake Control System and Diagnosis ...</b>	<b>4A-1</b>	Front Brake Caliper Disassembly and Reassembly .....	4B-3
<b>Diagnostic Information and Procedures .....</b>	<b>4A-1</b>	Front Brake Caliper Parts Inspection .....	4B-5
Brake Symptom Diagnosis.....	4A-1	Front Brake Disc Removal and Installation .....	4B-5
<b>Repair Instructions .....</b>	<b>4A-1</b>	Front Brake Disc Inspection .....	4B-6
Front Brake Hose Routing Diagram .....	4A-1	<b>Specifications .....</b>	<b>4B-7</b>
Rear Brake Hose Routing Diagram.....	4A-3	Tightening Torque Specifications .....	4B-7
Front Brake Light Switch Inspection .....	4A-4	<b>Special Tools and Equipment .....</b>	<b>4B-7</b>
Rear Brake Light Switch Inspection .....	4A-4	Recommended Service Material .....	4B-7
Rear brake Light Switch Inspection and Adjustment .....	4A-5	Special Tool .....	4B-7
Brake Fluid Level Check .....	4A-5	<b>Rear Brakes.....</b>	<b>4C-1</b>
Brake Hose Inspection .....	4A-5	<b>Repair Instructions .....</b>	<b>4C-1</b>
Brake Pedal Height Inspection and Adjustment .....	4A-6	Rear Brake Components.....	4C-1
Air Bleeding from Brake Line .....	4A-6	Rear Brake Pad Inspection .....	4C-2
Brake Fluid Replacement.....	4A-7	Rear Brake Pad Replacement .....	4C-2
Front Brake Hose Removal and Installation.....	4A-9	Rear Brake Caliper Removal and Installation .....	4C-3
Rear Brake Hose Removal and Installation .....	4A-9	Rear Brake Caliper Disassembly and Reassembly .....	4C-4
Front Brake Master Cylinder Assembly / Brake Lever Components .....	4A-9	Rear Brake Caliper Parts Inspection.....	4C-6
Front Brake Master Cylinder Assembly Removal and Installation.....	4A-10	Rear Brake Disc Removal and Installation.....	4C-7
Front Brake Master Cylinder Assembly / Brake Lever Disassembly and Reassembly ...	4A-11	Rear Brake Disc Inspection.....	4C-8
Front Brake Master Cylinder Parts Inspection ..	4A-13	<b>Specifications .....</b>	<b>4C-8</b>
Rear Brake Master Cylinder Assembly Components.....	4A-14	Tightening Torque Specifications .....	4C-8
Rear Brake Master Cylinder Assembly Removal and Installation.....	4A-15	<b>Special Tools and Equipment .....</b>	<b>4C-9</b>
Rear Brake Master Cylinder Disassembly and Assembly .....	4A-15	Recommended Service Material .....	4C-9
Rear Brake Master Cylinder Parts Inspection ...	4A-17	Special Tool .....	4C-9
<b>Specifications .....</b>	<b>4A-18</b>	<b>ABS .....</b>	<b>4E-1</b>
Tightening Torque Specifications.....	4A-18	<b>Precautions.....</b>	<b>4E-1</b>
<b>Special Tools and Equipment .....</b>	<b>4A-18</b>	Precautions for ABS Service.....	4E-1
Recommended Service Material .....	4A-18	Precautions for Diagnosing Troubles .....	4E-1
Special Tool .....	4A-18	Precautions for ABS .....	4E-1
<b>Front Brakes .....</b>	<b>4B-1</b>	<b>General Description .....</b>	<b>4E-1</b>
<b>Repair Instructions .....</b>	<b>4B-1</b>	Wheel Speed Sensor Description .....	4E-1
		ABS Control Unit Description .....	4E-2
		Hydraulic Unit (HU) Description .....	4E-3
		Self-diagnosis Function and ABS Indicator Light Description .....	4E-4
		Fail-safe Function Description.....	4E-5

<b>Schematic and Routing Diagram.....</b>	<b>4E-6</b>	DTC C1655 (55).....	4E-34
ABS Wiring Diagram .....	4E-6	DTC C1661 (61).....	4E-35
ABS Control Unit / HU Diagram .....	4E-7	<b>Repair Instructions .....</b>	<b>4E-36</b>
Front Wheel Speed Sensor Routing Diagram.....	4E-8	Seat Heat Shield Construction .....	4E-36
Rear Wheel Speed Sensor Routing Diagram .....	4E-9	ABS Control Unit Coupler Disconnect and	
<b>Component Location .....</b>	<b>4E-10</b>	Connect.....	4E-37
ABS Components Location .....	4E-10	Front Wheel Speed Sensor Removal and	
<b>Diagnostic Information and Procedures.....</b>	<b>4E-11</b>	Installation .....	4E-37
ABS Check.....	4E-11	Rear Wheel Speed Sensor Removal and	
Visual Inspection .....	4E-13	Installation .....	4E-38
ABS Symptom Diagnosis .....	4E-14	Front Wheel Speed Sensor Rotor Removal	
ABS Indicator Light Inspection .....	4E-14	and Installation .....	4E-38
DTC (Diagnostic Trouble Code) Output.....	4E-16	Rear Wheel Speed Sensor Rotor Removal	
DTC (Diagnostic Trouble Code) Deleting.....	4E-19	and Installation .....	4E-39
ABS Hydraulic Unit Operation Check.....	4E-21	Wheel Speed Sensor and Sensor Rotor	
DTC Table.....	4E-24	Inspection.....	4E-39
DTC C1625 (25).....	4E-25	ABS Control Unit / HU Removal and	
DTC C1635 (35).....	4E-26	Installation .....	4E-40
DTC C1641 (41).....	4E-27	<b>Specifications .....</b>	<b>4E-41</b>
DTC C1642 (42).....	4E-28	Tightening Torque Specifications.....	4E-41
DTC C1644 (44).....	4E-30	<b>Special Tools and Equipment .....</b>	<b>4E-41</b>
DTC C1645 (45).....	4E-31	Special Tool .....	4E-41
DTC C1647 (47) / C1648 (48).....	4E-33		