

4A



Rear Brake Master Cylinder Assembly Removal and Installation


[Reference: Rear Brake Master Cylinder Assembly Components](#)

Removal

- 1) Drain brake fluid. 
- 2) Remove the reservoir tank mounting bolt (1).



- 3) Place a clean rag underneath the brake hose union bolt (1) on the master cylinder to catch any spilt brake fluid.
- 4) Remove the brake hose union bolt (1) and disconnect the brake hose.
- 5) Loosen the lock-nut (2).
- 6) Remove the master cylinder mounting bolts (3).
- 7) Remove the master cylinder with the reservoir by turning the push rod (4).

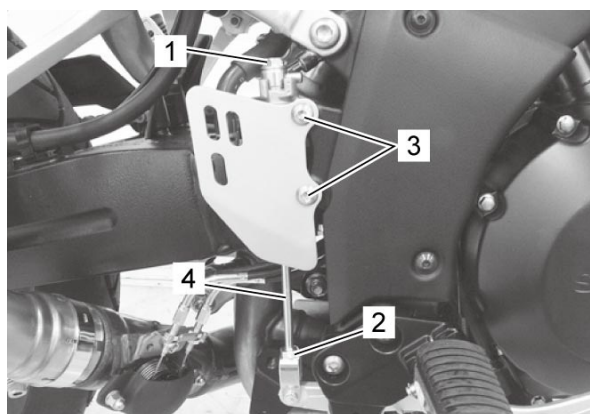

Installation

[Reference: Rear Brake Hose Routing Diagram](#)

- 1) Install the master cylinder (1) and cover (2).
- 2) Tighten the master cylinder mounting bolts (3) to the specified torque.

Tightening torque

Rear brake master cylinder mounting bolt (a): 10 N·m (1.0 kgf-m, 7.5 lbf-ft)

- 3) Tighten the lock-nut (4) to the specified torque.

Tightening torque


Rear brake master cylinder rod lock-nut (b): 18 N·m (1.8 kgf-m, 13.0 lbf-ft)

- 4) Install the new seal washers.

- 5) After setting the brake hose union to the stopper, tighten the union bolt (5) to the specified torque.

Tightening torque

Brake hose union bolt (c): 23 N·m (2.3 kgf-m, 17.0 lbf-ft)

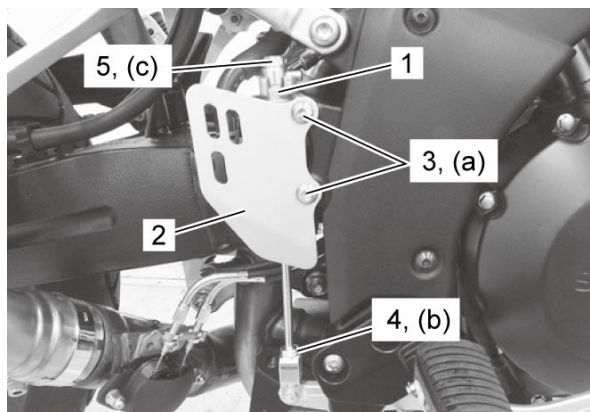

- 6) Tighten the reservoir tank mounting bolt.

- 7) Bleed air from the system after installing the master cylinder. [**Air Bleeding from Brake Line**](#)

- 8) Adjust the brake pedal height.