

4A



# Front Brake Light Switch Inspection

- 1) Disconnect the front brake light switch lead wire couplers (1).



- 2) Inspect the switch for continuity with a circuit tester.  
If any abnormality is found, replace the front brake light switch with a new one.

Color Position	Terminal (B/R)	Terminal (B/Bl)
OFF		
ON		



- 3) Connect the front brake light switch lead wire couplers.