

4C




Rear Brake Caliper Parts Inspection

Refer to [Rear Brake Caliper Disassembly and Reassembly](#).

Brake Caliper Cylinder

Inspect the brake caliper cylinder wall for nicks, scratches or other damage. If any damage is found, replace the caliper with a new one.

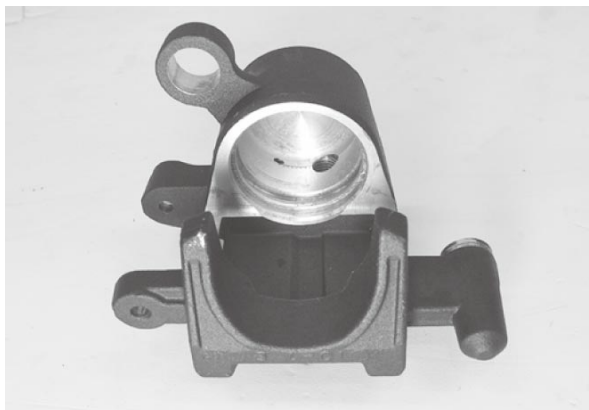

Brake Caliper Piston

Inspect the brake caliper piston surface for any scratches or other damage. If any defects are found, replace the piston with a new one.



Brake Pad Mounting Pin

Inspect the brake pad mounting pin for wear and other damage. If any damage is found, replace the brake pad mounting pin with a new one.



Boot and Spacer

Inspect the boots and spacer for damage and wear. If any defects are found, replace them with new ones.



Brake Pad Spring

Inspect the brake pad springs for damage and excessive bend. If any defects are found, replace them with new ones.



Brake Caliper Sliding Pin

Inspect the brake caliper sliding pin for wear and other damage. If any damage is found, replace the brake caliper sliding pin with a new one.

