

4C



Rear Brake Disc Removal and Installation

Refer to [Rear Wheel Assembly Removal and Installation](#).

Removal

- 1) Remove the rear brake disc (1).



Installation

Reference: [Rear Brake Disc Inspection](#)

- 1) Make sure that the brake disc (1) is clean and free of any grease.
- 2) Install the rear brake disc (1).

NOTE:

The stamped mark (2) on the brake disc should face to the outside.

- 3) Apply thread lock to the brake disc bolts and tighten them to the specified torque.

"A": Thread lock cement 99000-32130 (THREAD LOCK CEMENT 1360)

Tightening torque

Brake disc bolt (a): 23 N·m (2.3 kgf-m, 17.0 lbf-ft)

