

4E



Precautions for ABS Service

- Battery voltage is always applied to the ABS control unit. Therefore, disconnect the battery (-) read wire before disconnecting the ABS control unit coupler.
- When the ABS control unit coupler is connected, do not disconnect the sensor coupler(s) with the ignition switch turned ON. If the sensor coupler is disconnected with the ignition ON, DTC will be stored in the ABS control unit.
- The wheel speed sensor cannot be disassembled.