



## Fail-safe Function Description

If malfunction occurs in the ABS electric system, this sets valve relay OFF. Consequently, motor relay will be set OFF and the indicator light ON, and no current will be applied to motor solenoid valve inactivating ABS and turning ABS indicator light ON. In this case, it functions as the normal brake. However, if malfunctions occurs while ABS is being activated, when ABS control unit diagnoses that the operation can continue, it will effectuate ABS provisional control (turning the ABS indicator light ON). Upon the moment when ABS provisional control is over, the valve relay will be set OFF.

