


4E

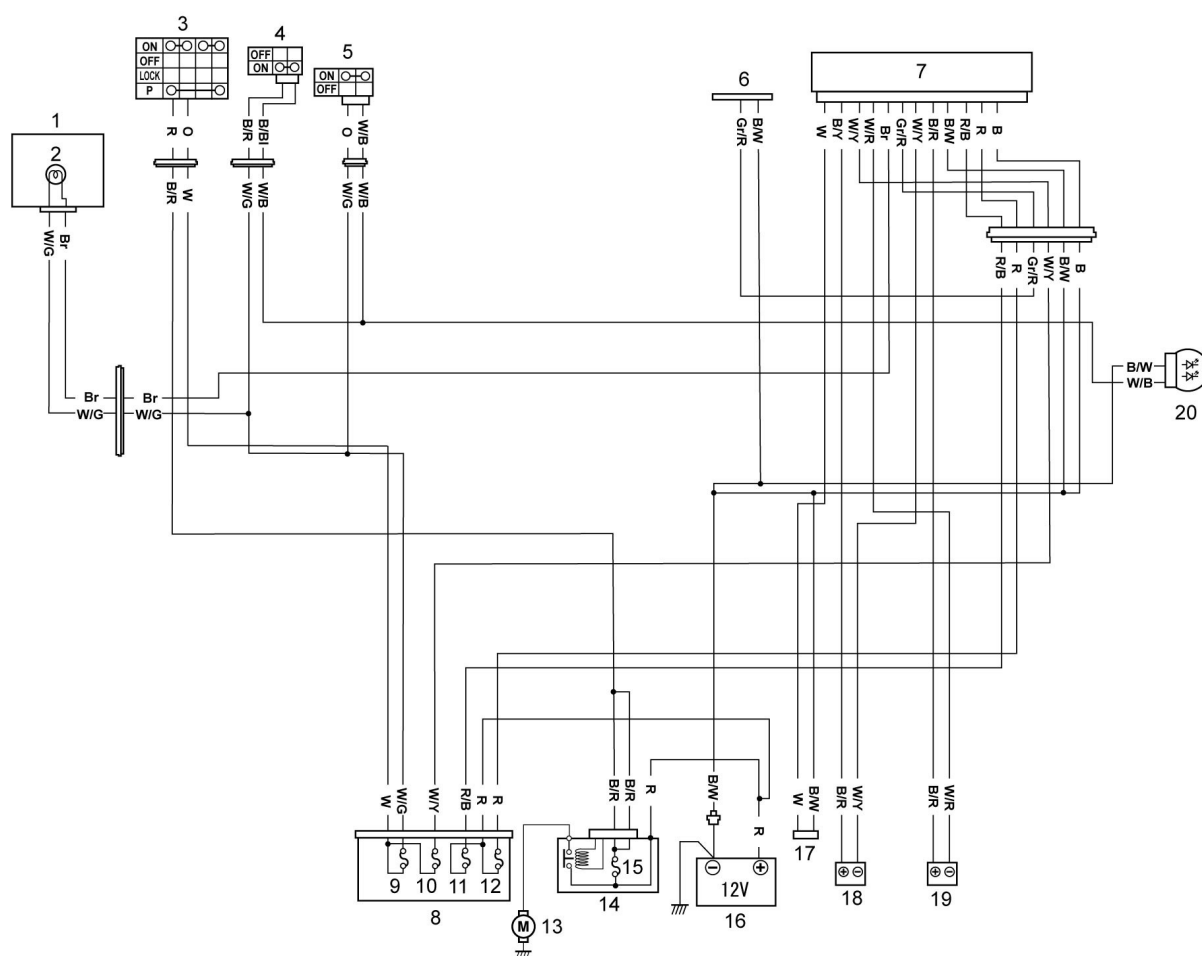

ABS Wiring Diagram



1.	Combination meter	8.	Fuse box	15.	Main fuse (30 A)
2.	ABS indicator light	9.	Signal fuse (15 A)	16.	Battery
3.	Ignition switch	10.	Ignition fuse (10 A)	17.	Mode select coupler
4.	Front brake switch	11.	ABS valve fuse (15 A)	18.	Rear wheel speed sensor
5.	Rear brake switch	12.	ABS motor fuse (25 A)	19.	Front wheel speed sensor
6.	SDS coupler	13.	Starter motor	20.	Rear combination light
7.	ABS control unit	14.	Starter relay		