

4E



ABS Symptom Diagnosis

Condition	Possible Cause	Action
The ABS indicator light keeps lighting up even though the motorcycle is ridden at more than 5 km/h (3.1 mile/h).	Malfunctioning the ABS function.	<i>Perform the ABS check.</i>
	Malfunctioning the ABS indicator light circuit.	<i>Check the ABS indicator light circuit.</i>
The ABS indicator light does not light up when turning the ignition switch to ON.	Malfunctioning the ABS function.	<i>Perform the ABS check.</i>
	Malfunctioning the ABS indicator light circuit.	<i>Check the ABS indicator light circuit.</i>
	Malfunctioning the combination meter.	<i>Check the combination meter.</i>