


4E




## ABS Control Unit Coupler Disconnect and Connect

### Disconnect

- 1) Turn the ignition switch OFF.
- 2) Remove the seat.
- 3) Remove the seat heat shield (1).

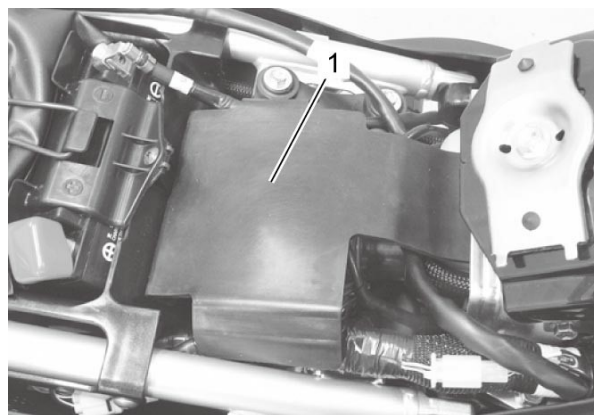

- 4) Pull up the lock lever (1) and disconnect the ABS control unit coupler (2).

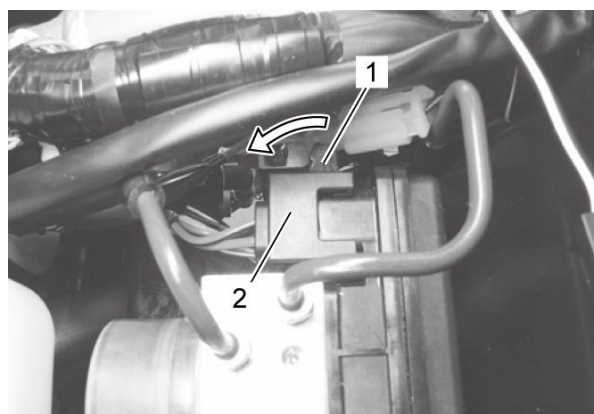

### Connect

- 1) Connect the ABS control unit coupler.
- 2) Install the seat heat shield. Refer to [Seat Heat Shield Construction](#).
- 3) Install the seat.