



Front Wheel Speed Sensor Rotor Removal and Installation

Refer to [Front Wheel Assembly Removal and Installation](#).

NOTICE:

Do not hit the front wheel speed sensor rotor when dismantling the front wheel.

Removal

- 1) Remove the front wheel speed sensor rotor (1) by removing the bolts.

NOTICE:

When replacing the tire, make sure not to damage the sensor rotor.




Installation

Reference: [Wheel Speed Sensor and Sensor Rotor Inspection](#)

- 1) Install the wheel speed sensor rotor as the letters "50T" face outside.
- 2) Tighten the front wheel speed sensor rotor bolts (1) to the specified torque.

Tightening torque

Wheel speed sensor rotor bolt (a): 6.5 N·m (0.65 kgf-m, 5.0 lbf-ft)

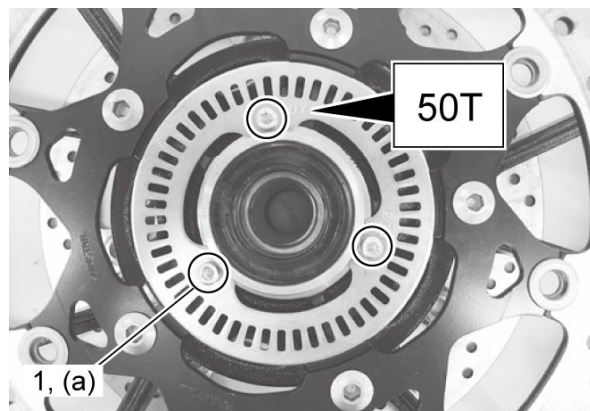

- 3) Check the clearance between the front wheel speed sensor and sensor rotor. Refer to [Wheel Speed Sensor and Sensor Rotor Inspection](#).