



## Rear Wheel Speed Sensor Rotor Removal and Installation

Refer to [Rear Wheel Assembly Removal and Installation](#).

### NOTICE:

**Do not hit the rear wheel speed sensor rotor when dismantling the rear wheel.**

### Removal

- 1) Remove the rear wheel speed sensor rotor (1) by removing the bolts.

### NOTICE:

**When replacing the tire, make sure not to damage the sensor rotor.**




### Installation

**Reference:** [Wheel Speed Sensor and Sensor Rotor Inspection](#)

- 1) Install the wheel speed sensor rotor as the letters "50T" face outside.
- 2) Tighten the rear wheel speed sensor rotor bolts (1) to the specified torque.

### Tightening torque

**Wheel speed sensor rotor bolt (a): 6.5 N·m (0.65 kgf-m, 5.0 lbf-ft)**

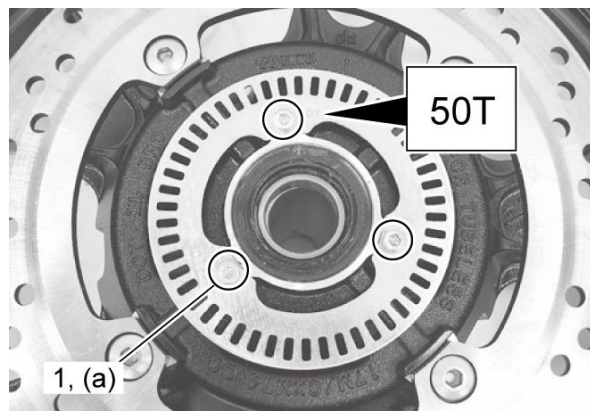

- 3) Check the clearance between the rear wheel speed sensor and sensor rotor. Refer to [Wheel Speed Sensor and Sensor Rotor Inspection](#).