

Section 5

Transmission / Transaxle

CONTENTS

Precautions	5-1
Precautions	5-1
Precautions for Transmission / Transaxle	5-1
Manual Transmission	5B-1
Diagnostic Information and Procedures	5B-1
Manual Transmission Symptom Diagnosis	5B-1
Repair Instructions	5B-2
Transmission Components	5B-2
Transmission Removal and Installation	5B-3
Transmission Construction	5B-4
Countershaft Assembly / Driveshaft	
Assembly Disassembly and Reassembly	5B-4
Gearshift Fork / Gearshift Cam Inspection	5B-7
Left Crankcase Bearing / Oil Seal Removal	
and Installation	5B-8
Right Crankcase Bearing Removal and	
Installation	5B-10
Transmission Bearing / Oil Seal Inspection	5B-11
GP Switch Inspection	5B-11
GP Switch Removal and Installation	5B-11
Gearshift Lever Removal and Installation	5B-12
Gearshift Lever Height Inspection and	
Adjustment	5B-12
Gearshift Lever Construction	5B-12
Gearshift Shaft / Gearshift Cam Plate	
Components	5B-12
Gearshift Shaft / Gearshift Cam Plate	
Removal and Installation	5B-13
Gearshift Linkage Inspection	5B-16
Gearshift Shaft Oil Seal Removal and	
Installation	5B-16
Specifications	5B-17
Tightening Torque Specifications	5B-17
Special Tools and Equipment	5B-18
Recommended Service Material	5B-18
Special Tool	5B-18
Clutch	5C-1

Precautions	5C-1
Precautions for Clutch System	5C-1
Clutch Fluid (Brake Fluid) Information	5C-1
Schematic and Routing Diagram	5C-2
Clutch Hose Routing Diagram	5C-2
Diagnostic Information and Procedures	5C-3
Clutch System Symptom Diagnosis	5C-3
Repair Instructions	5C-3
Clutch Lever Position Switch Inspection	5C-3
Clutch Fluid Level Inspection	5C-4
Clutch Hose Inspection	5C-4
Air Bleeding from Clutch Line	5C-4
Clutch Fluid Replacement	5C-5
Clutch Hose Removal and Installation	5C-6
Clutch Control System Components	5C-6
Clutch Master Cylinder Assembly Removal	
and Installation	5C-7
Clutch Master Cylinder / Clutch Lever	
Disassembly and Reassembly	5C-8
Clutch Master Cylinder Parts Inspection	5C-10
Clutch Release Cylinder / Clutch Push Rod	
(Left) Removal and Installation	5C-10
Clutch Push Rod (Left) Inspection	5C-11
Clutch Release Cylinder Disassembly and	
Reassembly	5C-11
Clutch Release Cylinder Inspection	5C-12
Clutch Components	5C-13
Clutch Removal	5C-14
Clutch Installation	5C-16
Clutch Parts Inspection	5C-20
Primary Drive Gear Removal and Installation	5C-22
Primary Drive Gear Inspection	5C-23
Primary Drive Gear Disassembly and	
Reassembly	5C-24
Specifications	5C-25
Tightening Torque Specifications	5C-25
Special Tools and Equipment	5C-26
Recommended Service Material	5C-26
Special Tool	5C-26