

5B




Gearshift Lever Height Inspection and Adjustment

Inspection

Inspect the gearshift lever height "a" between the pedal top face and footrest.
Adjust the gearshift lever height if necessary.

Gearshift lever height "a"

Standard: 20 – 30 mm (0.8 – 1.2 in)

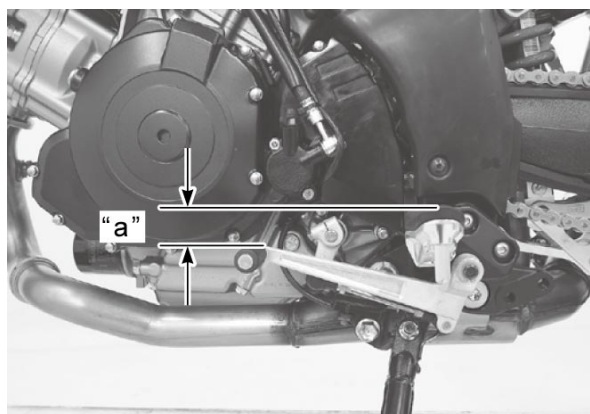

Adjustment

- 1) Loosen the lock-nuts (1).
- 2) Turn the gearshift link rod (2) in or out until the gearshift lever height is within the specification.

Gearshift lever height

Standard: 20 – 30 mm (0.8 – 1.2 in)

- 3) Tighten the lock-nuts (1) to the specified torque.

Tightening torque

Gearshift link rod lock-nut (a): 10 N·m (1.0 kgf-m, 7.5 lbf-ft)

