

5B



Gearshift Lever Removal and Installation

Refer to [Gearshift Lever Construction](#).

Removal

Remove the gearshift lever.

Installation

- 1) Install the gearshift lever.
- 2) Check the gearshift lever height.