

5B



Gearshift Linkage Inspection

Refer to [Gearshift Shaft / Gearshift Cam Plate Removal and Installation](#).

Gearshift Shaft

Check the gearshift shaft (1) for bend or wear.

Check the return spring (2) for damage or fatigue.

If any defects are found, replace the defective part(-s).



Gearshift Shaft Oil Seal

Inspect the gearshift shaft oil seal lip (1) for damage or wear. If any defect is found, replace the oil seal with a new one.

