

5B



## Gearshift Shaft Oil Seal Removal and Installation

### Removal

- 1) Remove the gearshift cover.
- 2) Remove the gearshift shaft oil seal (1).



### Installation

- 1) Install the new oil seal (1) with the special tool.

#### **Special Tool**

**(A): 09913-70210**

- 2) Apply grease to the oil seal lip.

**"A": Grease 99000-25011 (SUZUKI SUPER GREASE A)**

