


5C





Clutch Release Cylinder / Clutch Push Rod (Left) Removal and Installation


[Reference: Clutch Control System Components](#)

Removal

- 1) Drain clutch fluid. 
- 2) Remove the clutch hose union bolt (1) and disconnect the clutch hose (2).
- 3) Remove the clutch release cylinder (3) and release cylinder spacer (4).

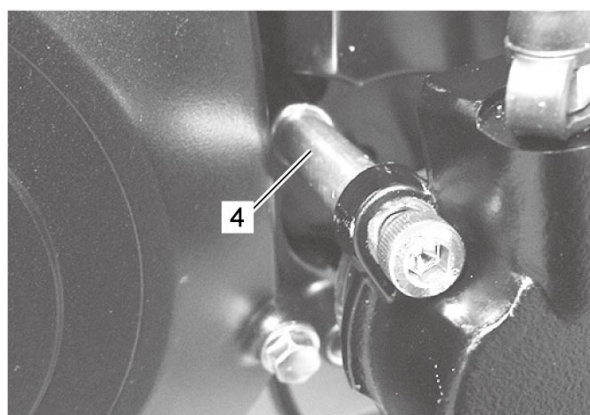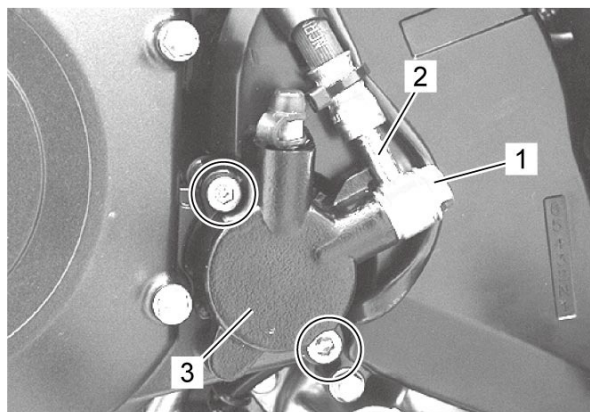

- 4) Remove the clutch push rod (left) (1).

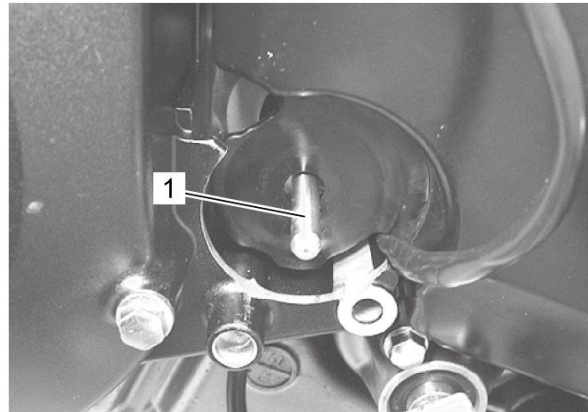


Installation

Reference: Clutch Push Rod (Left) Inspection

Install the clutch release cylinder/clutch push rod (left) in the reverse order of removal. Pay attention to the following points:

- Apply a small quantity of grease to the clutch push rod end.

"A": Grease 99000-25011 (SUZUKI SUPER GREASE A)

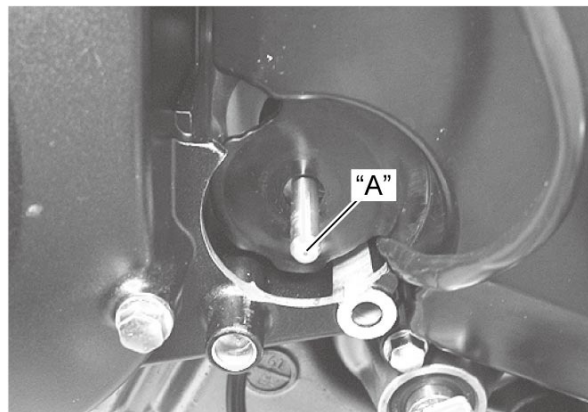

- Tighten the clutch release cylinder mounting bolts (1) to the specified torque.

Tightening torque

Clutch release cylinder mounting bolt (a): 10 N·m (1.0 kgf-m, 7.5 lbf-ft)

- Install the clutch hose union bolt (2) and new washers (3) to clutch hose.
- After the clutch hose union has contacted the stopper, tighten the union bolt (2) to the specified torque.

Tightening torque

Clutch hose union bolt (b): 23 N·m (2.3 kgf-m, 17.0 lbf-ft)

