

5C



Clutch Release Cylinder Inspection

Refer to [Clutch Release Cylinder Disassembly and Reassembly](#).

Inspect the clutch release cylinder bore wall for nicks, scratches or other damage. If any damage is found, replace it with a new one.

Inspect the piston surface for any scratches or other damage. If any damage is found, replace it with a new one.

