

5C



## Primary Drive Gear Inspection

Refer to [Primary Drive Gear Removal and Installation](#).

Visually inspect the gear teeth for wear and damage. If they are worn, replace the gear with a new one. 

