


5C



Clutch Lever Position Switch Inspection

1) Disconnect the clutch lever position switch lead wires (1).

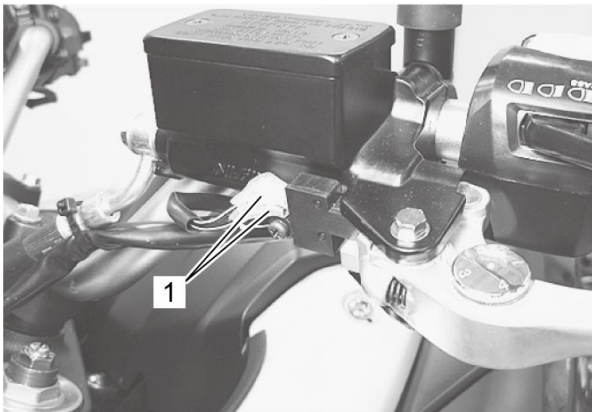

2) Inspect the clutch lever position switch for continuity with the tester.
If any abnormality is found, replace the switch with a new one.

Color Position	Terminal (B/W)	Terminal (B/Y)
OFF		
ON		



3) Connect the clutch lever position switch lead wire.