

5C



## Clutch Fluid Replacement

- 1) Place the motorcycle on a level surface and keep the handlebars straight.
- 2) Remove the clutch fluid reservoir cap and diaphragm.
- 3) Suck up the old clutch fluid as much as possible.



- 4) Fill the reservoir with new clutch fluid.

**Brake fluid (DOT 4)**

- 5) Attach a clear hose to the air bleeder valve and insert the free end of the hose into a receptacle.
- 6) Loosen the air bleeder valve, squeeze and release the clutch lever and drain the old clutch fluid out of the clutch system.

**NOTE:**

**While bleeding the clutch system, replenish the reservoir with the clutch fluid as necessary to keep the fluid above the lower level.**

- 7) Bleed the air from the clutch system.

