

## Section 6

## Steering

## CONTENTS

**Precautions ..... 6-1****Precautions ..... 6-1**

## Precautions for Steering ..... 6-1

**Steering General Diagnosis ..... 6A-1****Diagnostic Information and Procedures ..... 6A-1**

## Steering Symptom Diagnosis ..... 6A-1

**Steering / Handlebar ..... 6B-1****Repair Instructions ..... 6B-1**

## Handlebar Components ..... 6B-1

## Handlebar Construction ..... 6B-2

## Handlebar Removal and Installation ..... 6B-3

## Handlebar Inspection ..... 6B-5

## Steering Stem Components ..... 6B-6

## Steering On-Vehicle Inspection ..... 6B-7

## Steering Tension Adjustment ..... 6B-7

Steering Stem Upper Bracket Removal and  
Installation ..... 6B-8

## Steering Stem Upper Bracket Inspection ..... 6B-10

## Steering Stem Removal and Installation ..... 6B-10

## Steering Stem Inspection ..... 6B-13

Steering Stem Bearing Removal and  
Installation ..... 6B-13**Specifications ..... 6B-14**

## Tightening Torque Specifications ..... 6B-14

**Special Tools and Equipment ..... 6B-15**

## Recommended Service Material ..... 6B-15

## Special Tool ..... 6B-15