





6B



Steering Stem Components

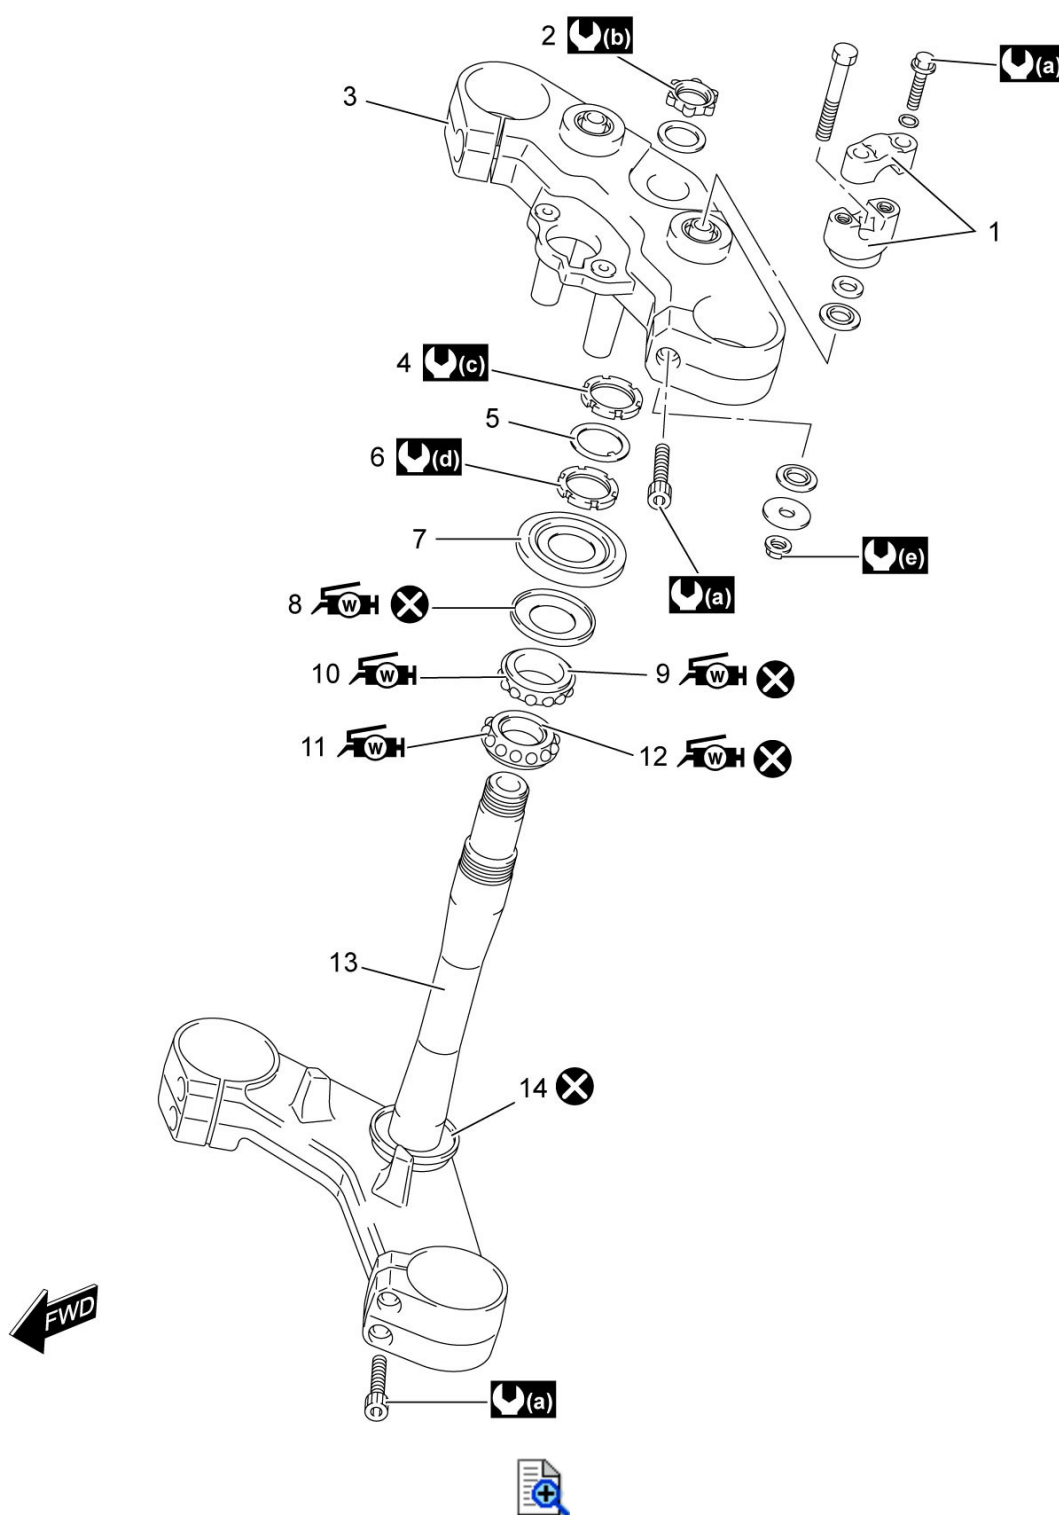

1.	Handlebar holder	7.	Dust cover	13.	Steering stem lower bracket		45 N·m (4.5 kgf-m, 32.5 lbf-ft)
2.	Steering stem head nut	8.	Dust seal	14.	Lower seal		Apply grease.
3.	Steering stem upper bracket	9.	Steering stem upper bearing inner race		23 N·m (2.3 kgf-m, 17.0 lbf-ft)		Do not reuse.

4.	Steering stem lock-nut	10.	Steering stem upper bearing		90 N·m (9.0 kgf-m, 65.0 lbf-ft)		
5.	Washer	11.	Steering stem lower bearing		80 N·m (8.0 kgf-m, 58.0 lbf-ft)		
6.	Steering stem nut	12.	Steering stem lower bearing inner race		20 N·m (2.0 kgf-m, 14.5 lbf-ft) → turn counterclockwise 0 – 1/4		