



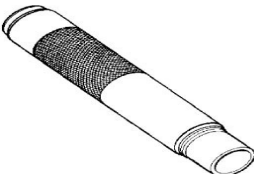

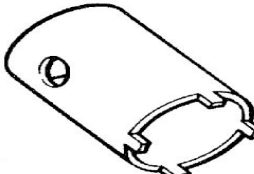


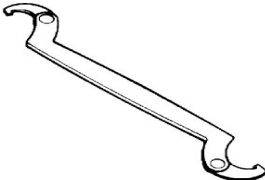


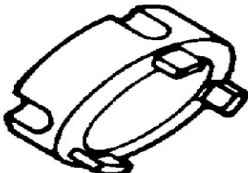





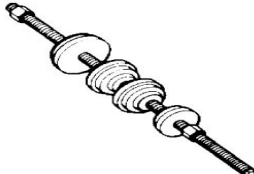




6B



## Special Tool

09910-60611	 	09913-70210	 
Universal clamp wrench		Bearing installing set (10 - 75 Φ)	
			
09925-18011	 	09940-14911	 
Bearing installer		Steering stem nut socket wrench	
 		  	
09940-14960	 	09940-92720	 
Steering stem nut socket wrench		Spring scale	
  			
09941-34513	 	09941-54911	 
Bearing installer		Bearing outer race remover	
